

843L2 Mulcher Controls

1DW843LBLMF710491

1852.3 hrs

LH controls:

Joystick – Steering

2 face buttons – Aux 2 = door

Foot pedals – Aux 2 = door

1 front button – Boom float,

Active only when mulcher pumps are engaged. Push and release. Cancels with RH joystick boom up.



RH controls:

Joystick – X axis = tilt, Y axis = boom

2 face buttons – Aux 1 = push bar

SSM:

Push the SAW button to engage mulcher pumps.

